



ISTRUZIONI PER LOFT PCLO842700 - LOFT ALL INCLUSIVE PCLO842600/02

ASSEMBLY INSTRUCTIONS FOR
LOFT PCLO842700 - LOFT ALL INCLUSIVE PCLO842600/02

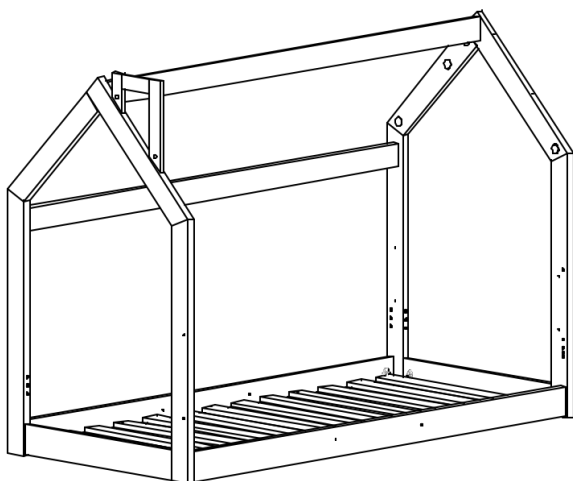

LOFT

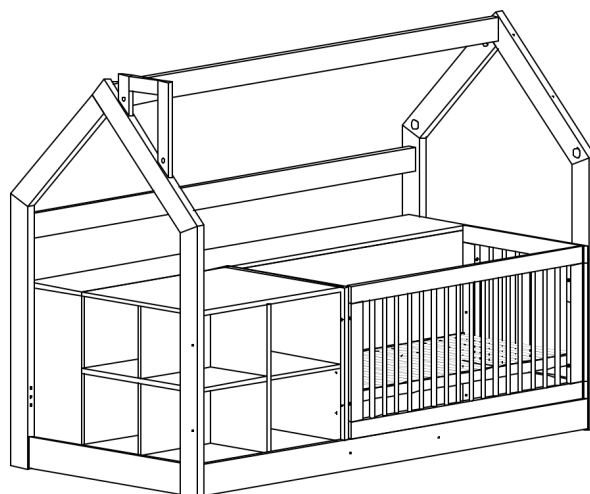


LOFT ALL INCLUSIVE

IMPORTANTE! LEGGERE ATTENTAMENTE LE ISTRUZIONI
E CONSERVARE PER UN UTILIZZO FUTURO

WARNING! READ THIS INSTRUCTIONS SHEET CAREFULLY
AND KEEP IT FOR FUTURE REFERENCE

COMPONENTI PER IL FISSAGGIO FIXING COMPONENTS

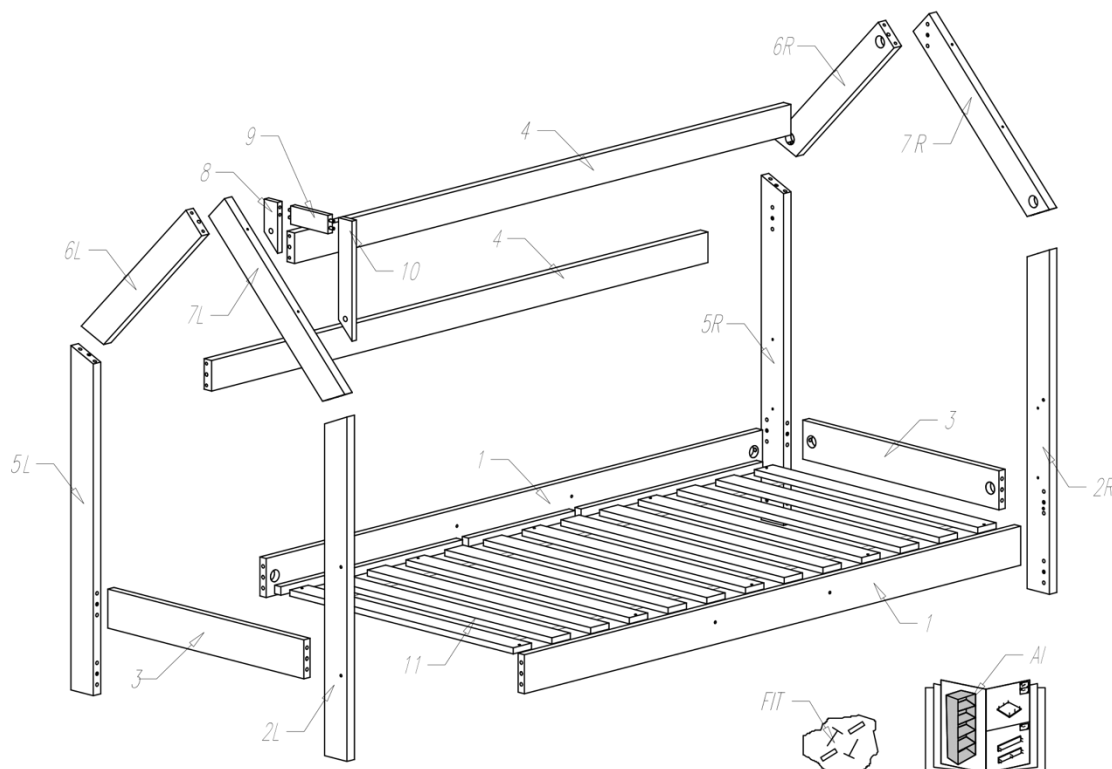

Colli 1/2:

No. 1 -x2
No. 2L -x1
No. 2R -x1
No. 3 -x2
No. 4 -x2
No. 5L -x1
No. 5R -x1
No. 6L -x1
No. 6R -x1
No. 7L -x1
No. 7R -x1
No. 8 -x1
No. 9 -x1
No. 10 -x1
No. AI -x1
No. FIT -x1


Colli 2/2:

No. 11-x1

A1 ø10x40	A2 ø8x40 x28	B1 L=24/ST x2	C ø15x18 x2	D MAXI M6 x18	E MAXI FIX x18	F x10
G ø3,5x30 x10	H Klej Glue Kleber x1	J ø18 x2		 SW6 x1	LOGO picci® x1	


Attrezzi
necessari

Tools
required

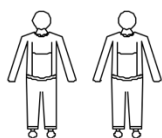


Attenzione! Non lasciare bambini incustoditi vicino ai mobili durante il montaggio. Piccole parti, pericolo di soffocamento.
Warning! Do not leave children unattended near furniture during installation. Small parts, the danger of suffocation.




LOFT



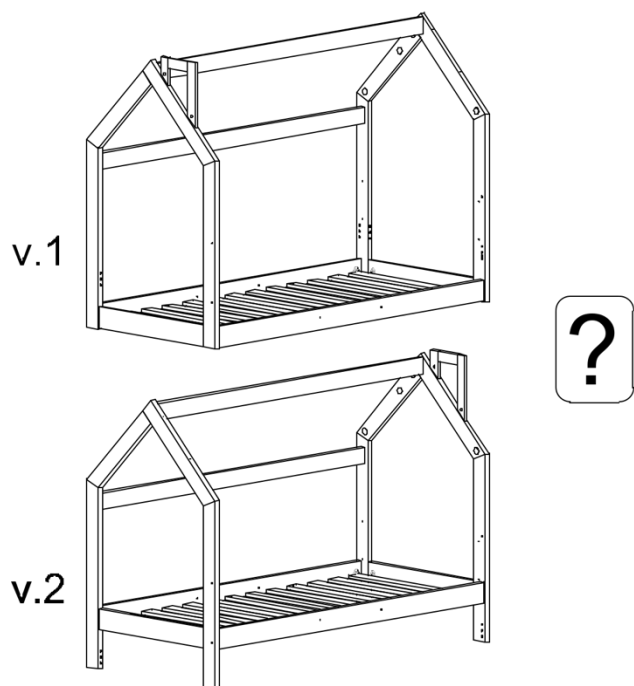


LOFT ALL INCLUSIVE



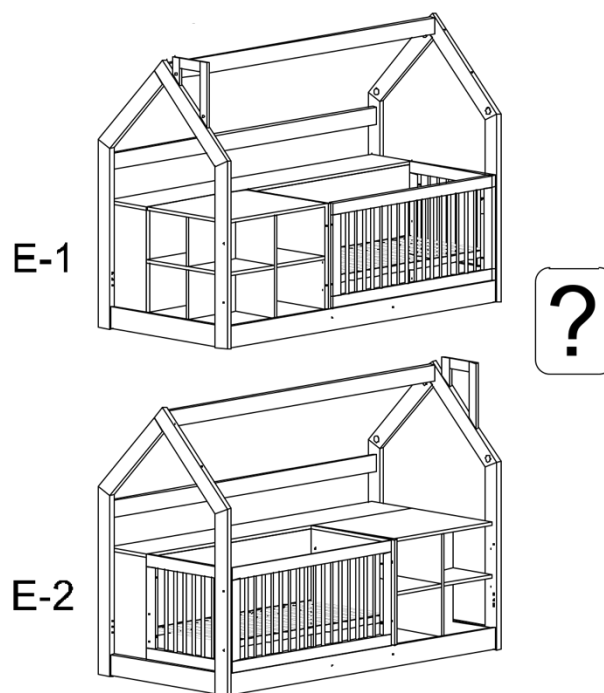




SPONDE PER LETTO LOFT / LOFT BED RAILS (optional)

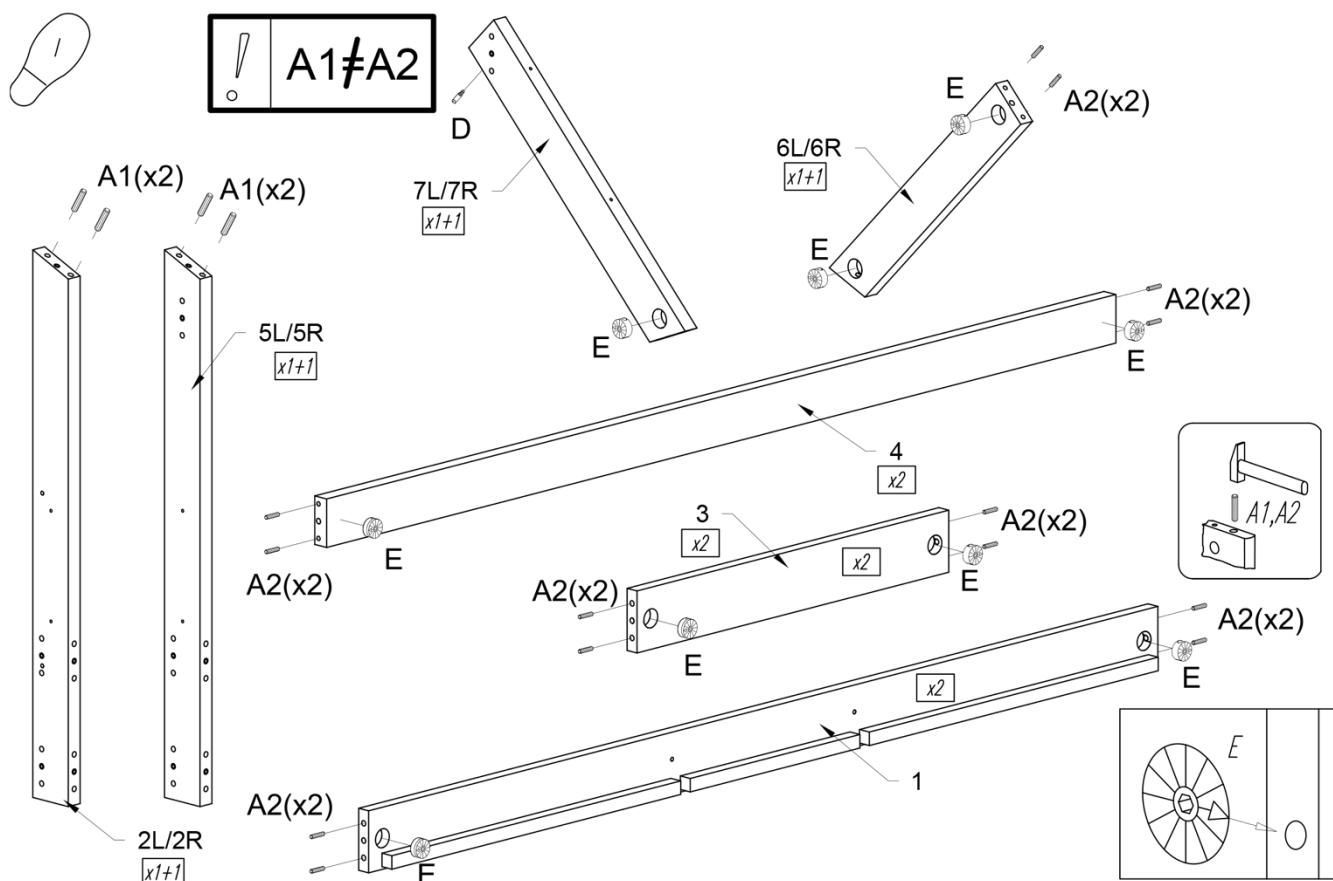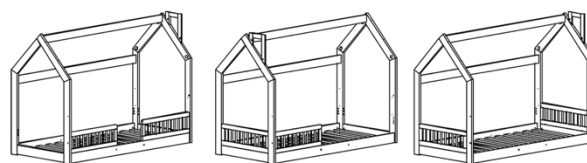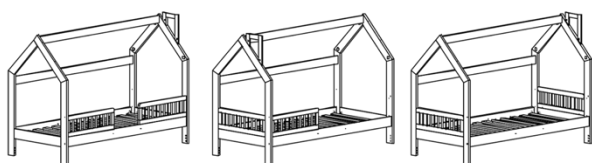


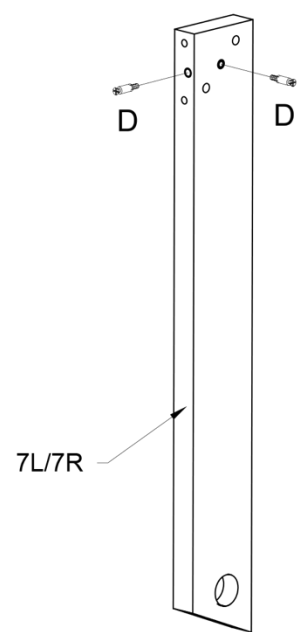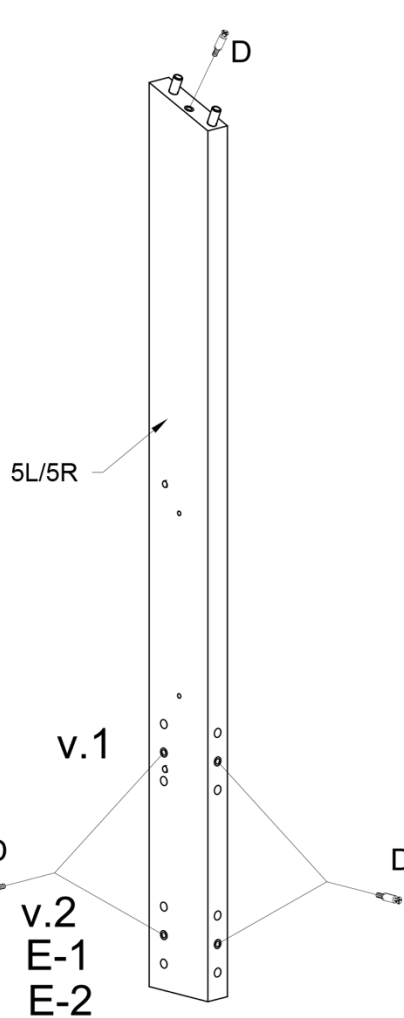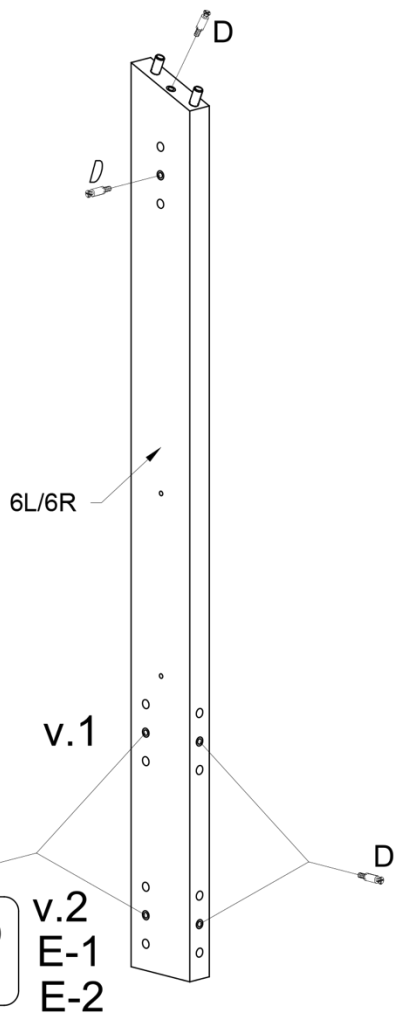


v.1
v.2
E-1
E-2

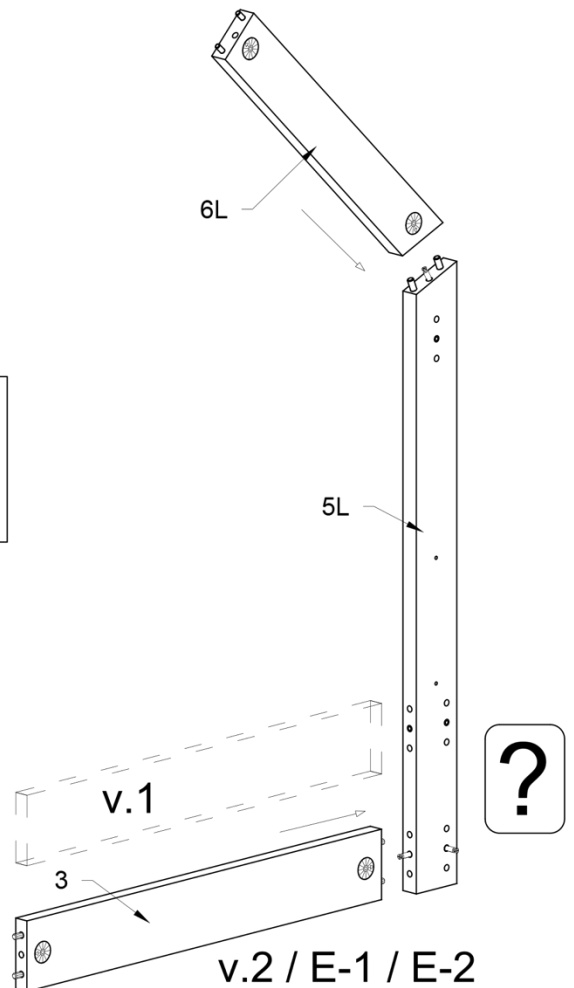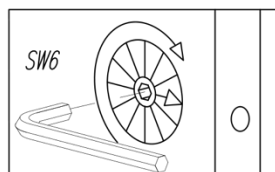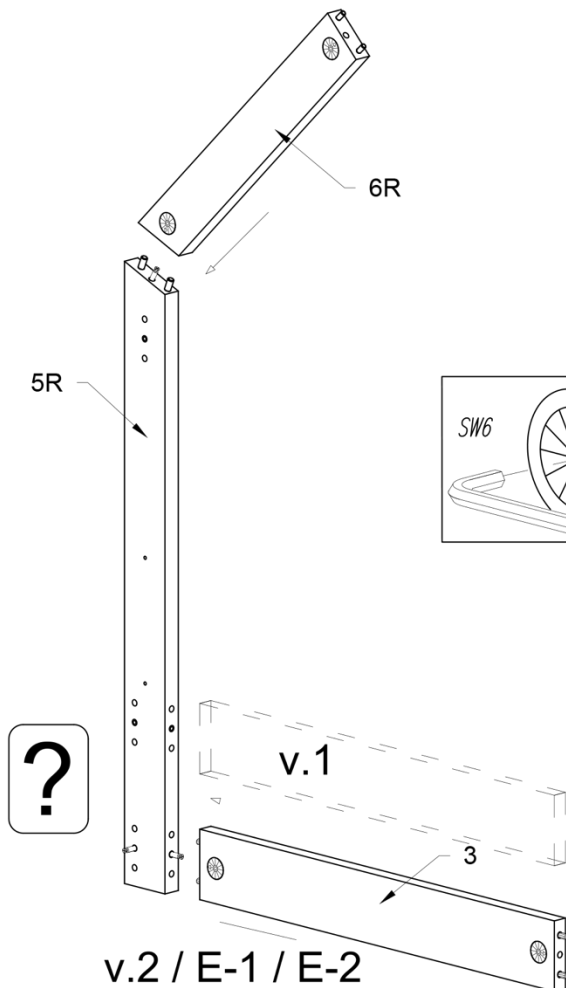


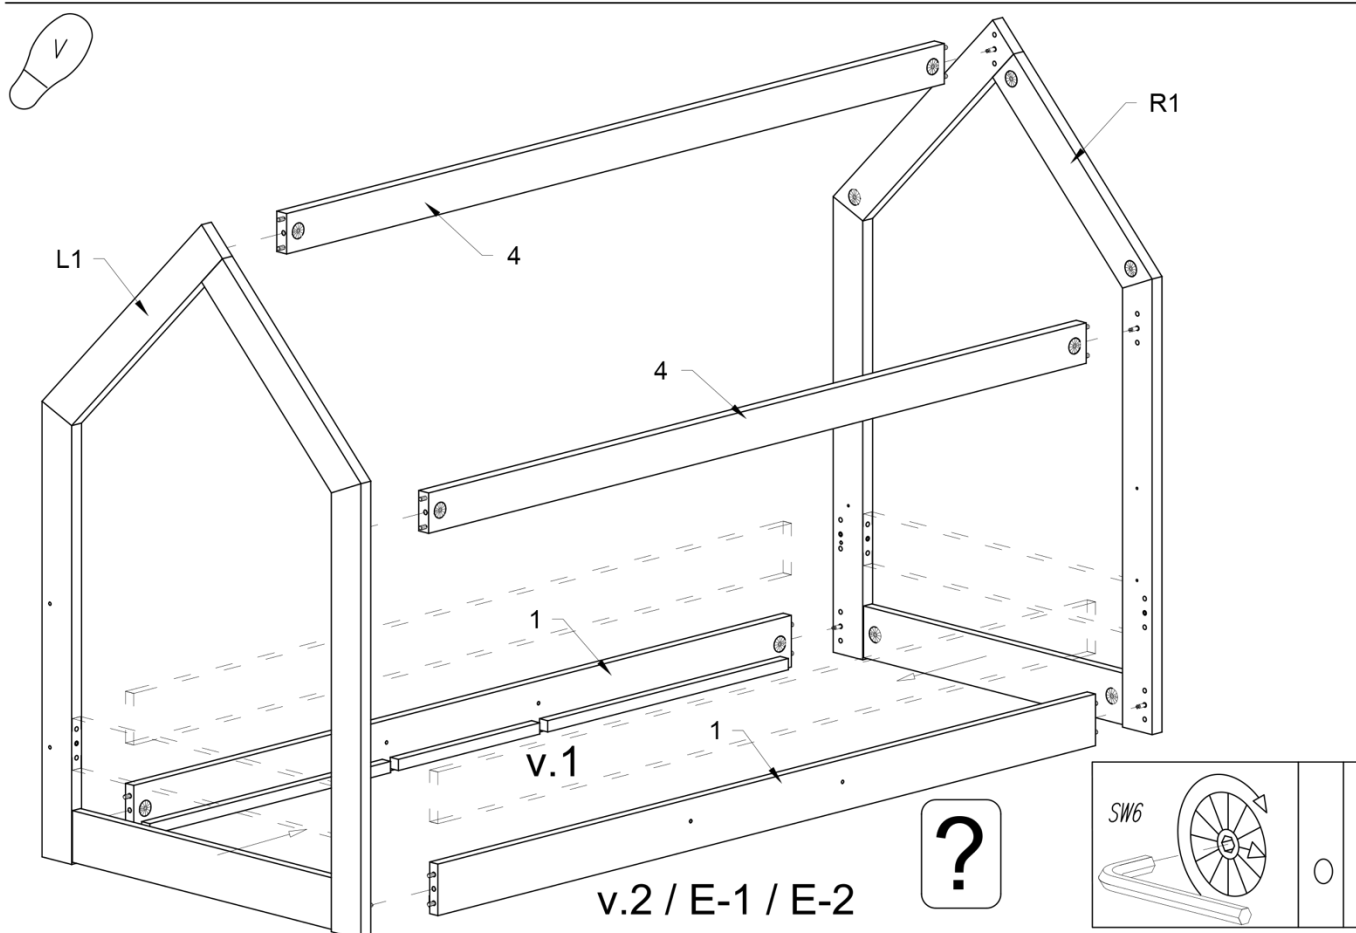
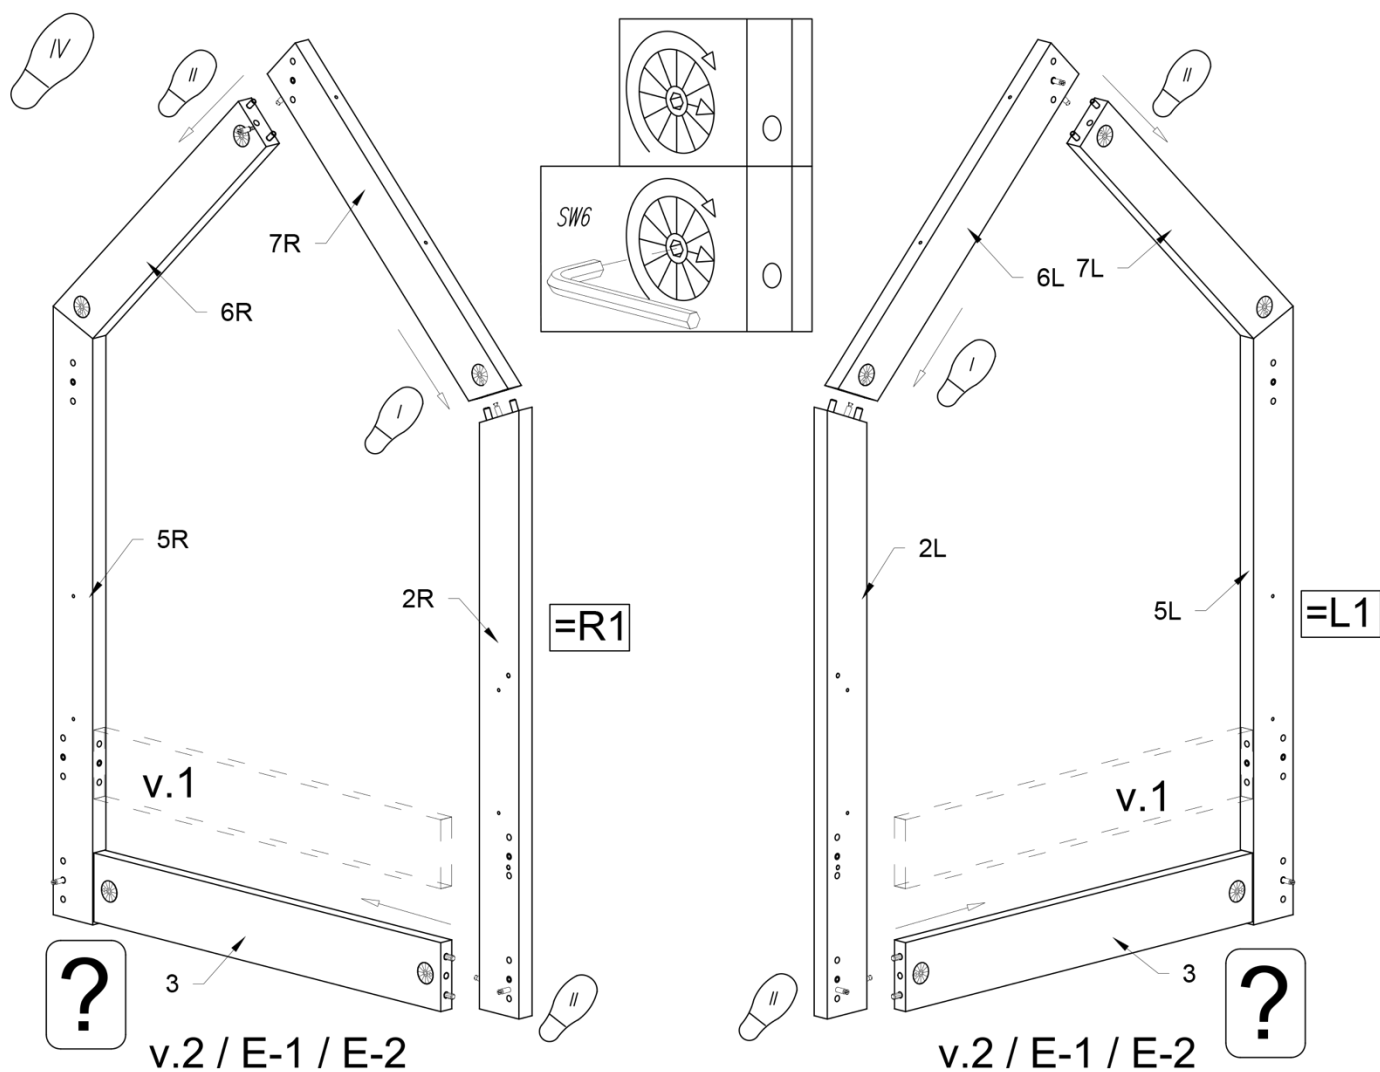


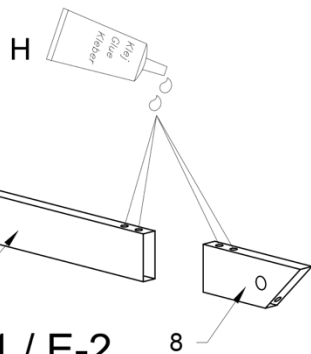

v.1 / v.2 / E-1 / E-2



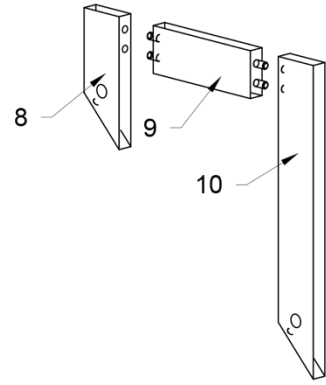


v.1 / v.2



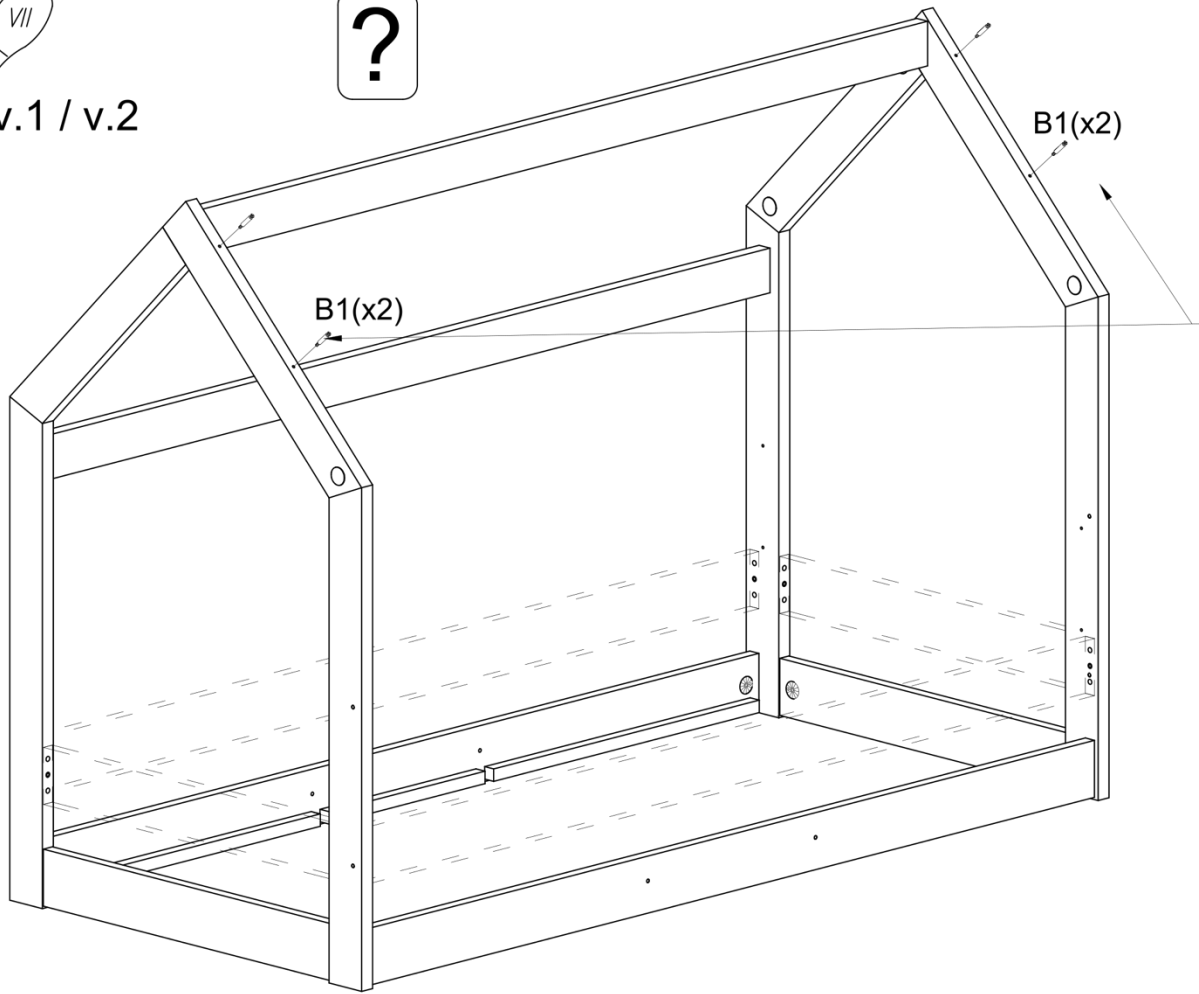




E-1

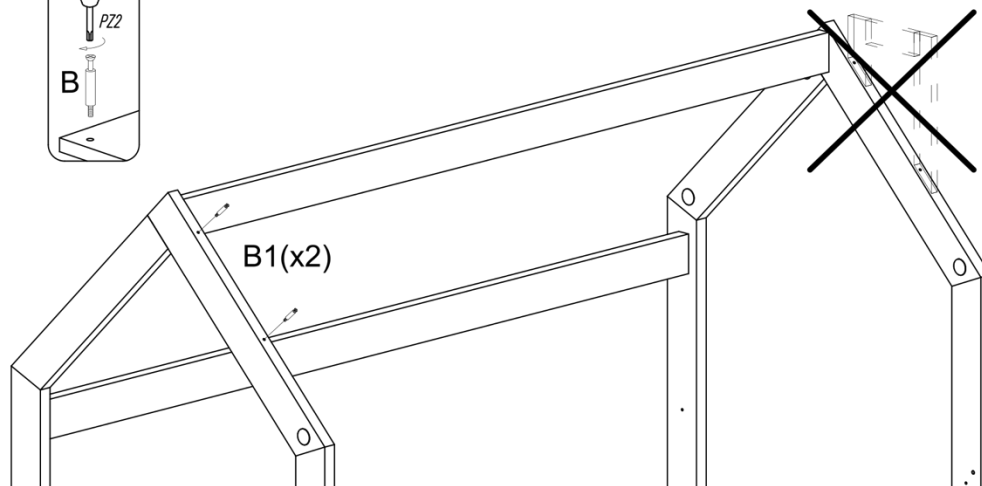
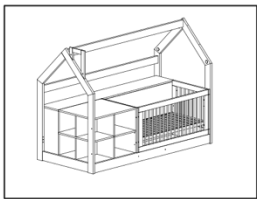


E-2

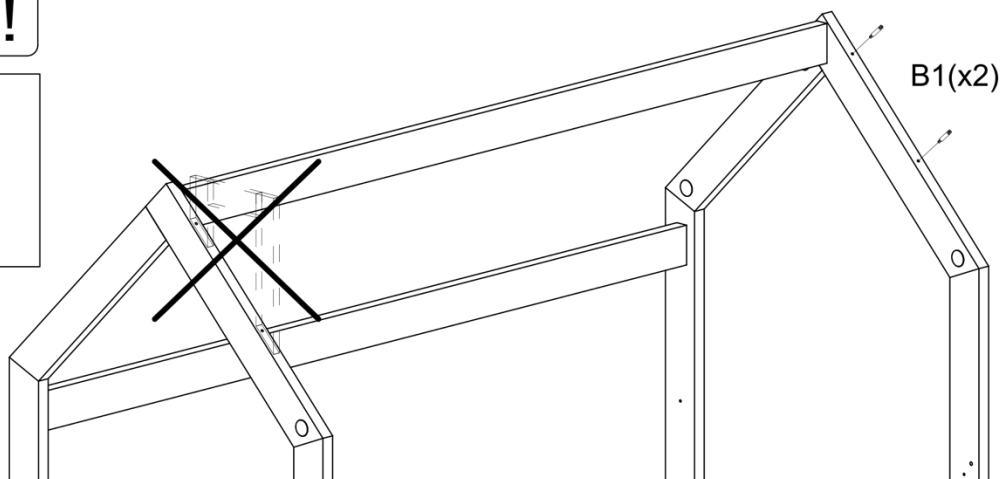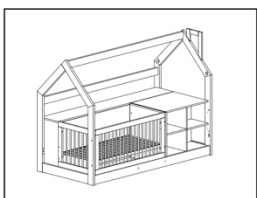




v.1 / v.2 / E-1

v.1 / v.2 / E-2

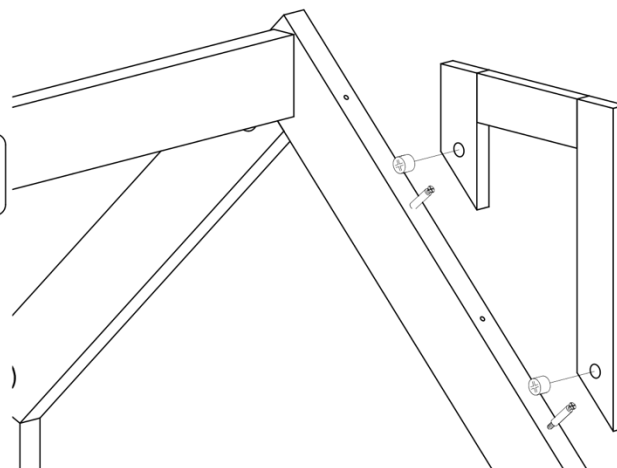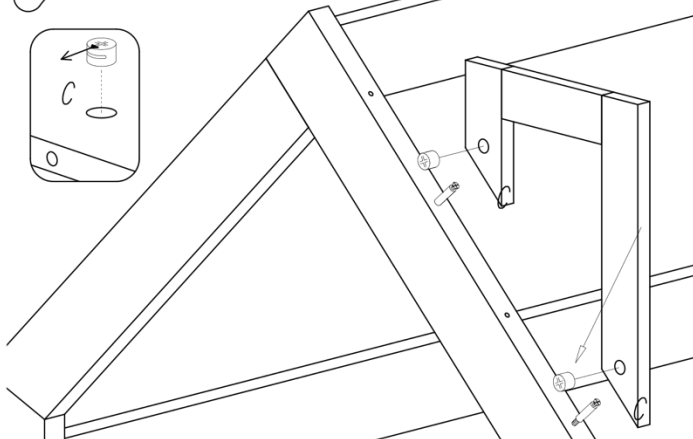


v.1 / v.2 / E-1

v.1 / v.2 / E-2

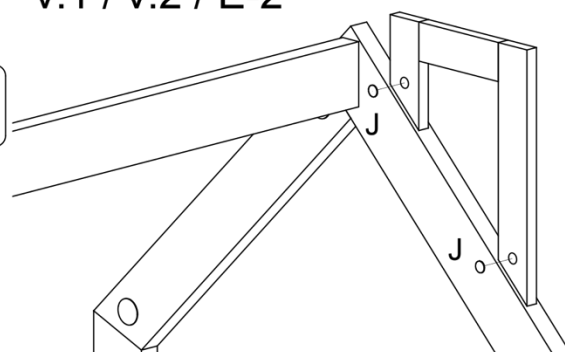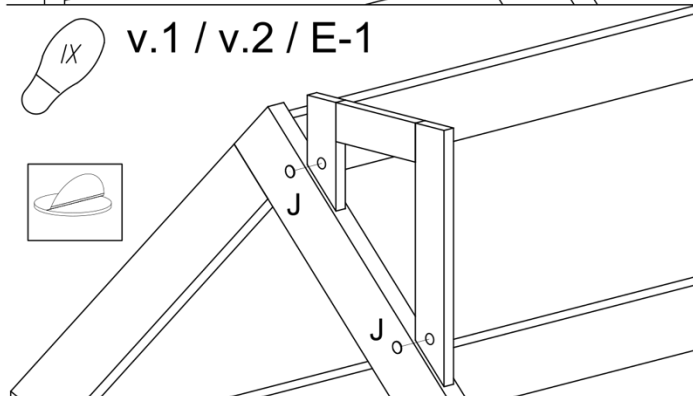



v.1 / v.2 / E-1 / E-2

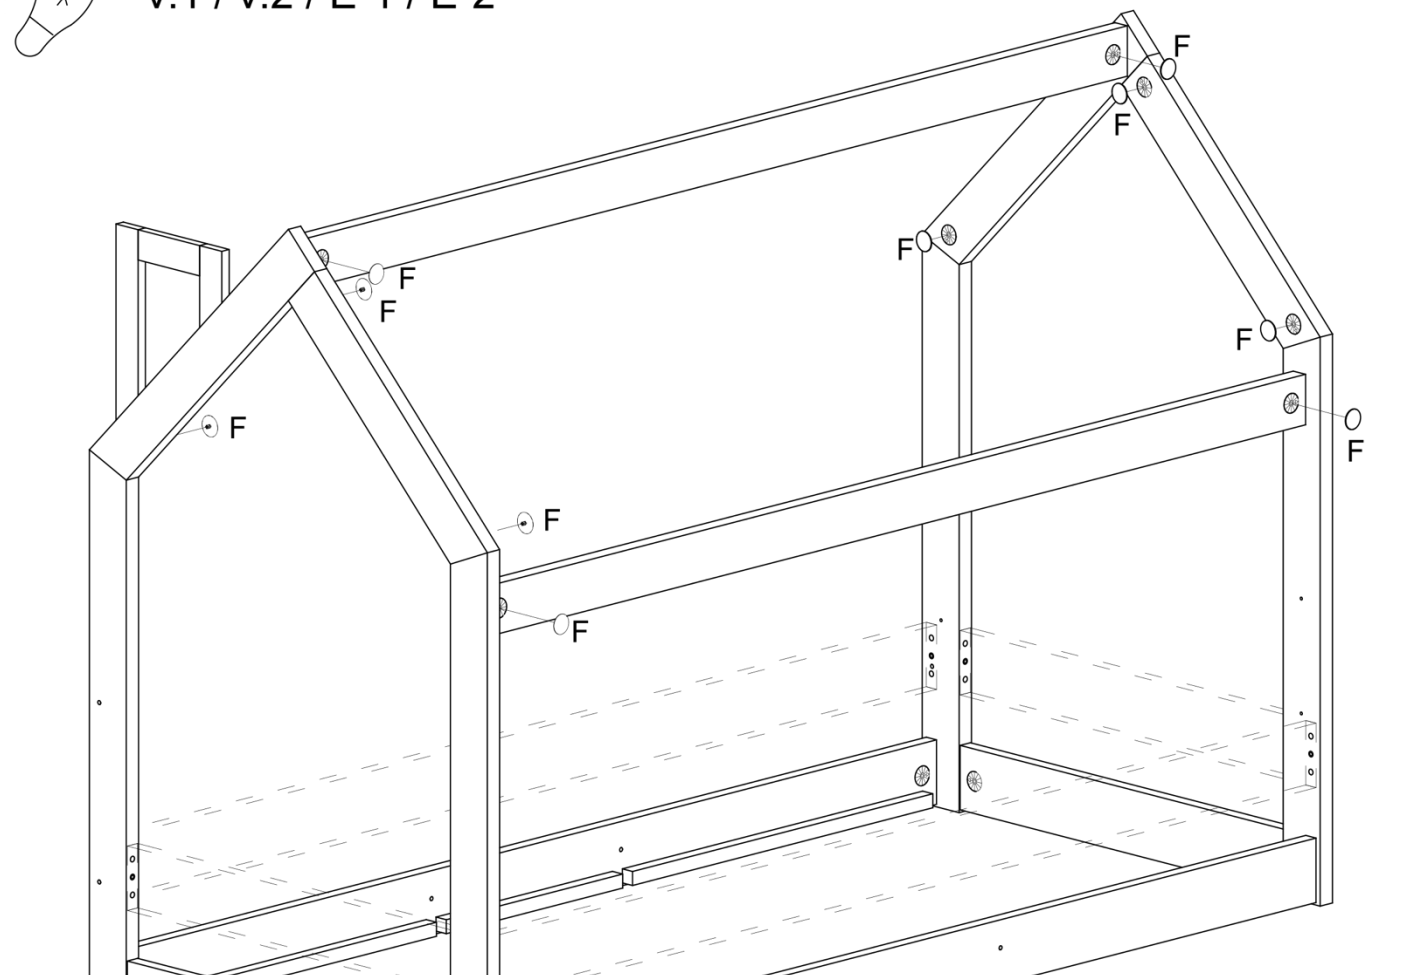

v.1 / v.2

